
CAUTION! IS YOUR VALVE OPEN OR CLOSED? MODEL 179-LP6 LOW PROFILE POSITION INDICATOR

Know the status of your buried service valve with the 179-LP6 from Valcom

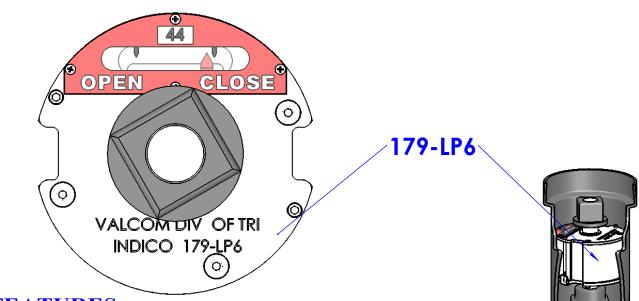

 (\uparrow)

FEATURES:

Eliminates the need for VBAs or risers. Wedgelock system holds unit securely in place. Eliminates the need for precise height adjustment of stems. Fits any valve box with a 6-1/8" ID or any 5-1/4" valve box with adjustable sleeve.

Can be used with locking covers, unit will slide past stop blocks. Can be removed without digging up pavement.

Gear ratios to 900:1 standard one low price. Higher ratios avail. Drop in installation, no accessories required. Ready to install. Manufactured from corrosion resistant materials.


Sealed against dust and dirt, suitable for inground installation. Fits into existing standpipes.


MADE IN THĔ USA







"INDICO" is a registered trademark of the VALCOM div of TRI 508 668 5583 website www.tooling-research.com email info@tooling-research.com

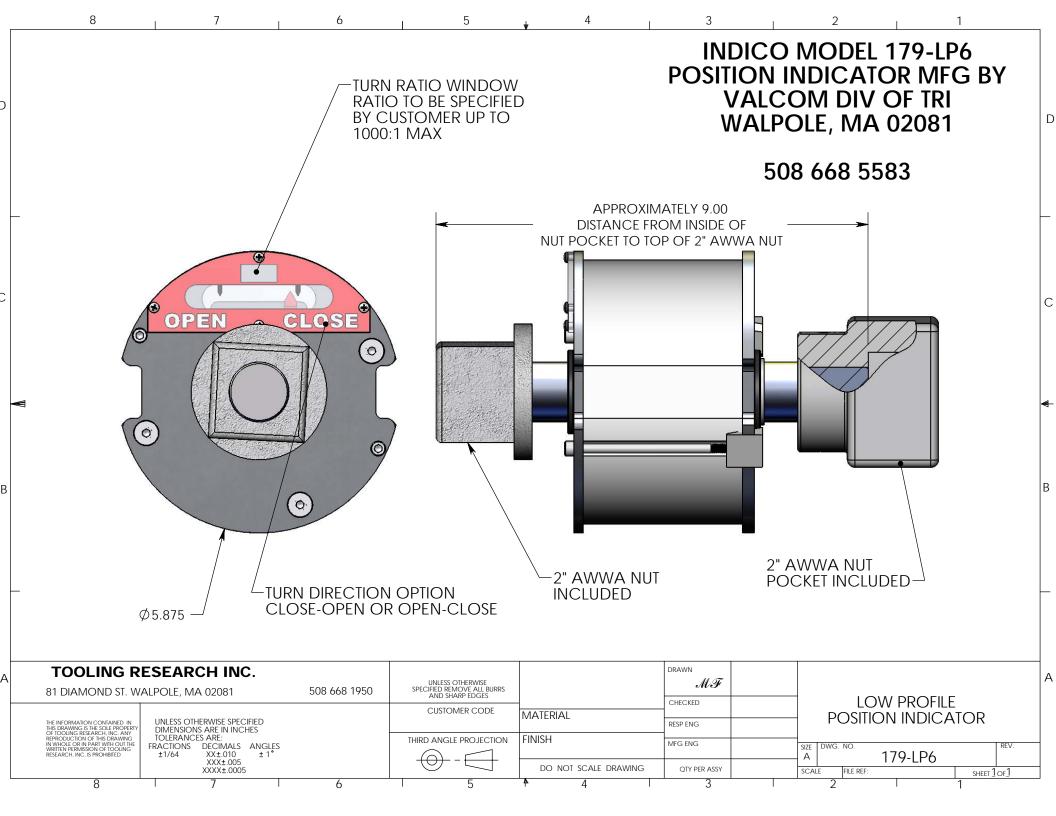

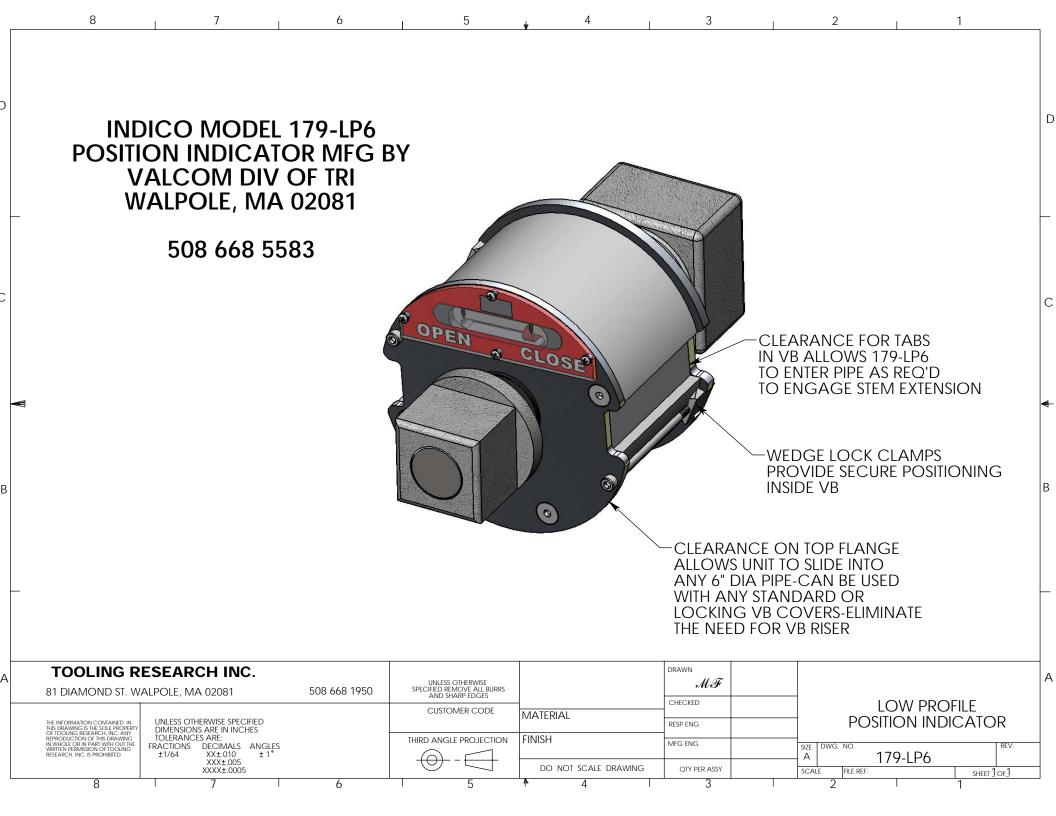

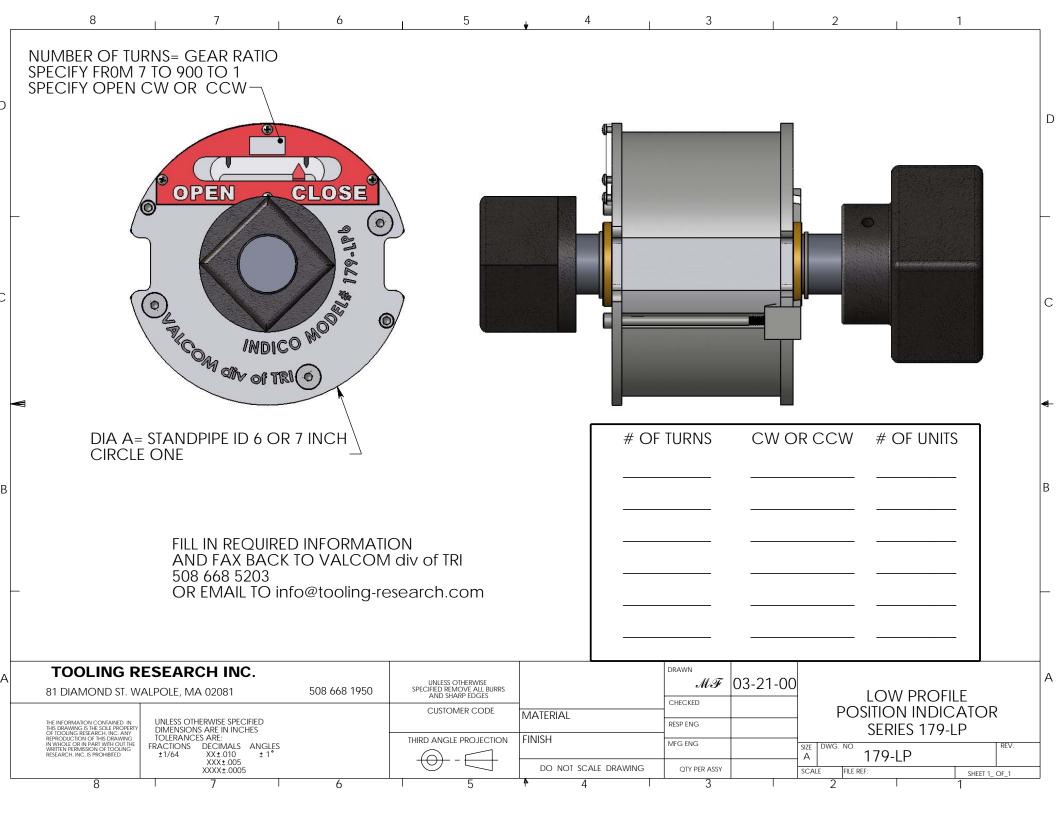

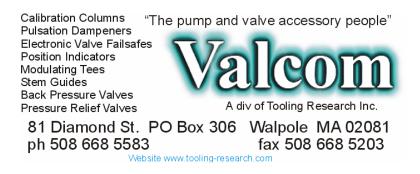

Installation of 179-LP low profile position indicator.

179-LP is designed to pass beyond locking hubs cast into standpipes and sit at any predetermined level within the pipe.

Note: Leave tape in place on Position indicator when installing for easier installation.

Insert position indicator into any 6" standpipe/ valve box until it engages 2" AWWA drive nut located on end of stem extension.

Insure that the arrow on the position indicator and the valve position coincide. IE if the valve is closed the position indicator arrow should be aligned with the black arrow on the closed side and vice versa.

Once located in position tighten two locking screws located at 180 degrees from each other on the top of the indicator using a long handled 5/32" Allen wrench. Preferably a ball driver type, but standard end will work. Tightening these screws will draw the two corresponding wedges between the indicator and the pipe wall providing a solid seat for the position indicator. Do not over tighten.

Install standard locking or non locking cover as required.

The 179-LP position indicator is designed to allow installation in any 6" standpipe without the necessity for a VBA. It can also be removed if required, and because of it's ability to fit entirely inside the pipe it eliminates the necessity for precise calculations of stem extension lengths.

Final note: It may be necessary in some instances to remove excess slag in some standpipes in order to allow the indicator to seat properly.